

Brno STD MATCH and Williams CZ FP TK sight installation

Before:



Tools and Parts:

- Brno STD MATCH sight set with insert
- Williams CZ FP TK (for left handed firearms)
- Small allen key (included with Brno globe)
- Smaller allen key (included with Williams)
- Small flathead
- Large modified flathead



Before any installation make sure firearm is unloaded!!!

Brno front globe sight installation


1. Remove the front sight hood

There are tabs holding it in place but a good FIRM push forward (towards the muzzle) with your thumbs will slide this right off.



2. Remove the front post

If you have a allen key screw here you may be able to use the allen key that came with the Brno globe. If you have a flathead screw, carefully use a small flat head. Slide post towards muzzle and off of rifle.

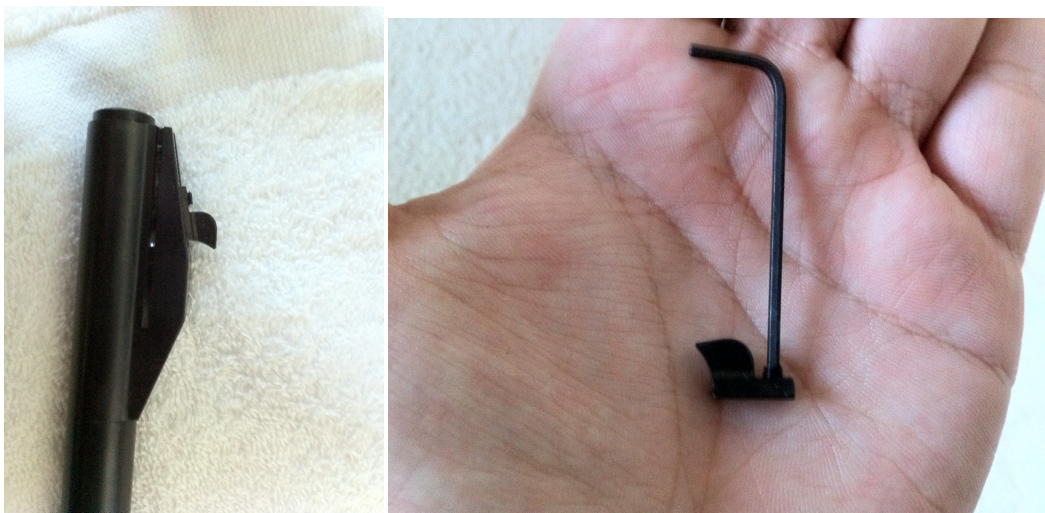

3. Gather the Parts for the Brno to CZ front sight adapter



From left to right

- "screw" front post
- slotted nut
- adapter body

4. Slide "screw" front post on



5. Place adapter body onto front ramp with screw going through hole in the adapter



Be sure to have the adapter directed so the slant in the adapter matches the front ramp and you end up with a level front dovetail.

Line up the front of the adapter with the front of the ramp.



6. Thread the slotted nut onto the "screw" front post



7. Use that modified flat head to tighten the slotted nut



8. Tighten the allen screws on BOTH sides of the adapter body with the supplied allen key



9. Slide the Brno front globe onto the rail



You may have to loosen the screw on the right side of the globe first. This mechanism pops to the left to allow the globe to slide onto the rail. After its in place pop the piece back to the right and tighten the screw. The slots for the inserts go towards the butt end of the stock.



10. Insert the insert

Tabs go into the slots in the side of the globe.



11. Screw in the globe nut



That's the installation of the Brno front Globe!

Brno STD MATCH rear sight installation

1. Slide the adapter onto the Brno rear sight



Make sure the hole for the locking bolt lines up on both pieces. BUT bolt does not go in until end of step 2!



2. Slide the adapter and Brno Rear onto the rear dovetail and screw in the locking bolt with brass tip.



Note: Rifle shown above has left handed action and stock



Williams CZ FP TK rear installation for left hand models



1. Loosen the 2 allen locking screws on the right side



Use the allen key that came with the rear. Notice the "locking bar" on the bottom



2. Loosen the flat head screw with a small flathead screwdriver



3. Slide the Williams rear onto the rear dovetail



You will have to hold the locking bar on the underside of the rear to the right to get it on. I line the rear up just short of the front (muzzle side) of the rear dovetail.

4. Tighten the allen screws back up to hold the "locking bar" in place



5. Tighten the top flathead screw



The Williams rear is now installed

